



# Sony Clie PEG-T615C Thumb Dial Replacement

This guide will help you remove and replace your malfunctioning thumb dial.

Written By: Rob





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Thumb Dial



- Remove 2 screws from thumb dial panel on the back of the device.

## Step 2



- Remove 1 screw from upper right corner on the back of the device.



### Step 3



- Remove 1 screw from thumb dial panel on the right side of the device.

### Step 4



- Remove screw from lower right side of the device.

## Step 5



- Remove 1 screw from the lower left side of the device.


## Step 6



- Remove 2 screws from the bottom of the device.



## Step 7

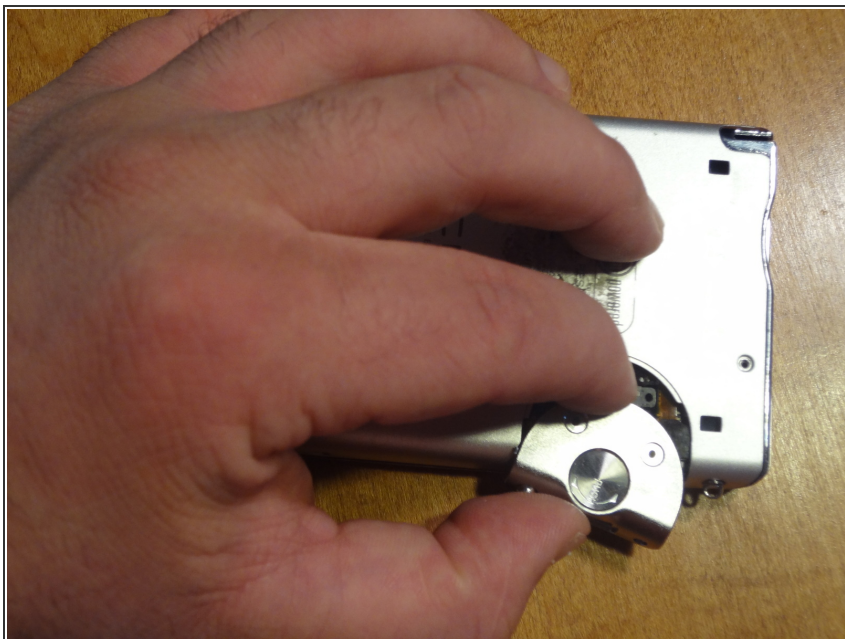

- Remove the thumb dial panel by sliding it away from the device.

## Step 8



- Remove the back panel exposing the inside of the device.

## Step 9



- Locate thumb dial on top right side of the board.


## Step 10



- Follow ribbon wire to locate where it plugs into the board. The plug is a flat black square.



## Step 11

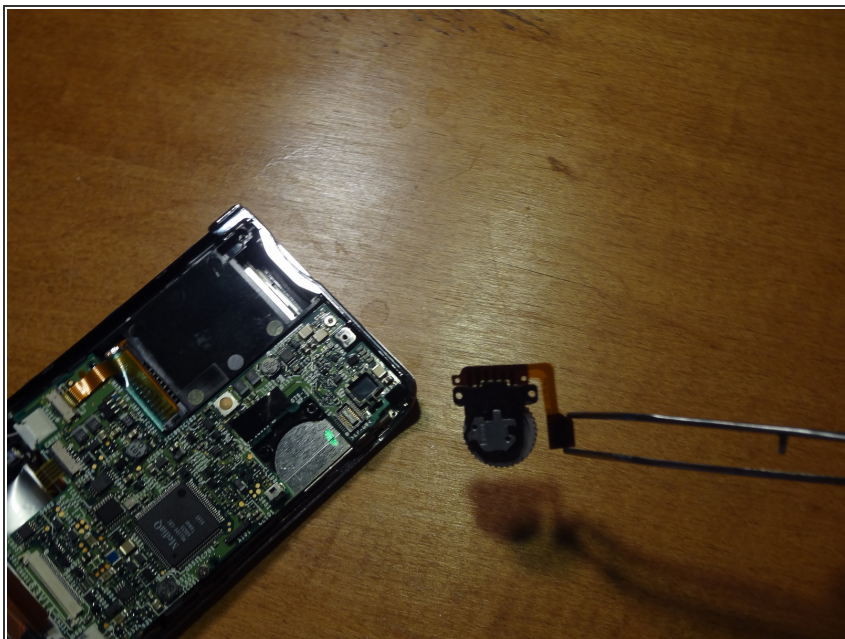

- Pull plug straight up to remove from board.

## Step 12



- Place plug back on board and push down on center to secure to board.



## Step 13



- Make sure new thumb dial is sitting flat and the screw holes line up with holes in the board.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-17 04:08:44 AM.